


HOME DECORATORS COLLECTION

BF-20904 OXFORD 4 DRAWER FILE CONSOLE

INV#52200













ASSEMBLY INSTRUCTIONS





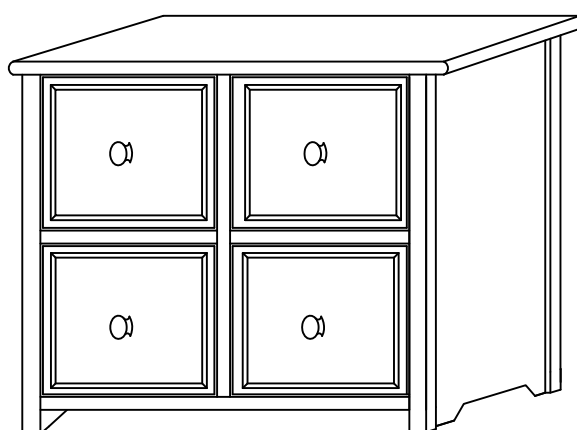






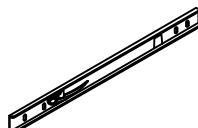






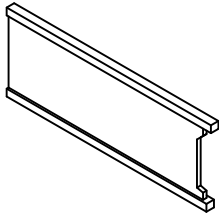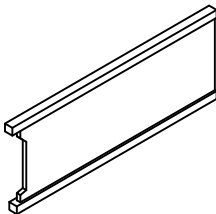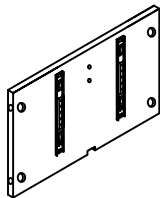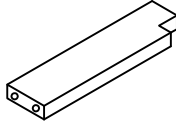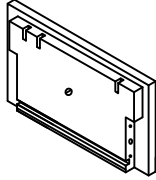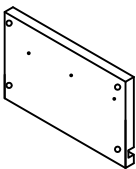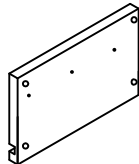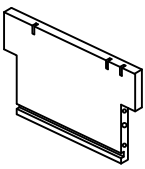


Made In China



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.


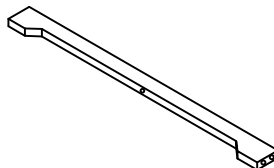
IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
<p>A</p>  <p>TOP PANEL-1PC</p>	<p>B</p>  <p>BOTTOM PANEL-1PC</p>	<p>C</p>  <p>LEFT SIDE PANEL-1PC</p>
<p>D</p>  <p>RIGHT SIDE PANEL-1PC</p>	<p>E</p>  <p>STAND PANEL-1PC</p>	<p>F</p>  <p>RIGHT ACROSS PANEL-1PC</p>
<p>F1</p>  <p>LEFT ACROSS PANEL-1PC</p>	<p>G</p>  <p>BACK PANELS-2PCS</p>	<p>H</p>  <p>DRAWER PANEL FRONTS-4PCS</p>
<p>I</p>  <p>RIGHT DRAWER PANEL SIDES-4PCS</p>	<p>I1</p>  <p>LEFT DRAWER PANEL SIDES-4PCS</p>	<p>J</p>  <p>DRAWER PANEL BACKS-4PCS</p>

K  KNOBS-4PCS	L  CAM-BOLTS-16PCS	M  CAM-LOCKS-16PCS	
N 6mm × 1 "  SCREWS-32PCS	N1 8mm × 1 "  SCREWS-1PC	O  DOWELS-24PCS	
P 6mm × 1/2 "  SCREWS-22PCS	Q 6mm × 1 "  SCREWS-2PCS	R  FILE HANGERS-8PCS	
S  CAM-TOOL-1PC	T 6mm × 3/8 "  SCREWS-24PCS	U  INNER SLIDES-8PCS	V  DRAWER PANEL BOTTOMS-4PCS
X  REAR PANEL GUIDE-1PC	Y 8mm × 5/8 "  SCREWS-4PCS	Z  LOW PANEL-1PC	W1 fall down prevention  HOOKS-2PCS
X1 fall down prevention 6mm × 1 "  SCREWS-2PCS	Y1 fall down prevention  GECKOS-2PCS	Z1 fall down prevention 7mm × 7/8 "  SCREWS-2PCS	Z2  FOOT-1PC




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

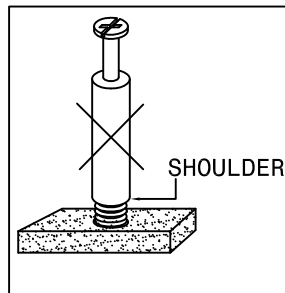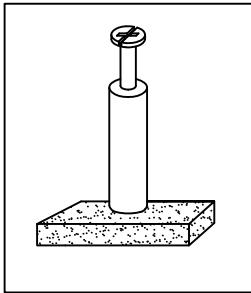


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

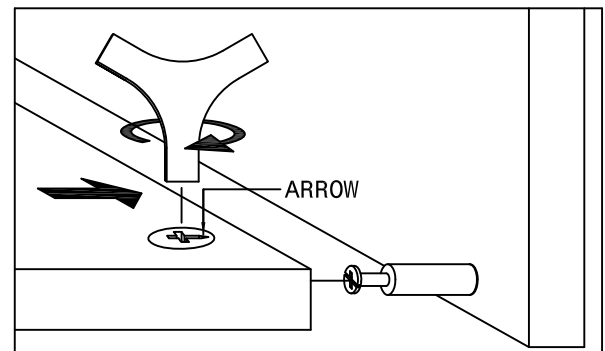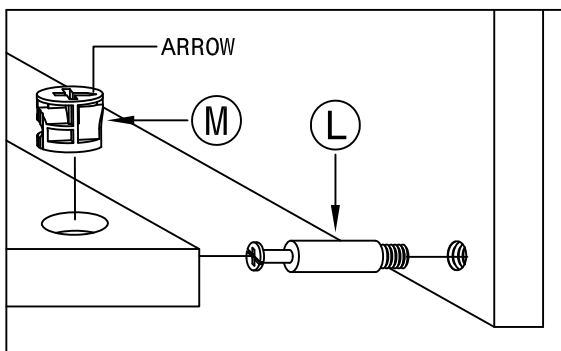


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

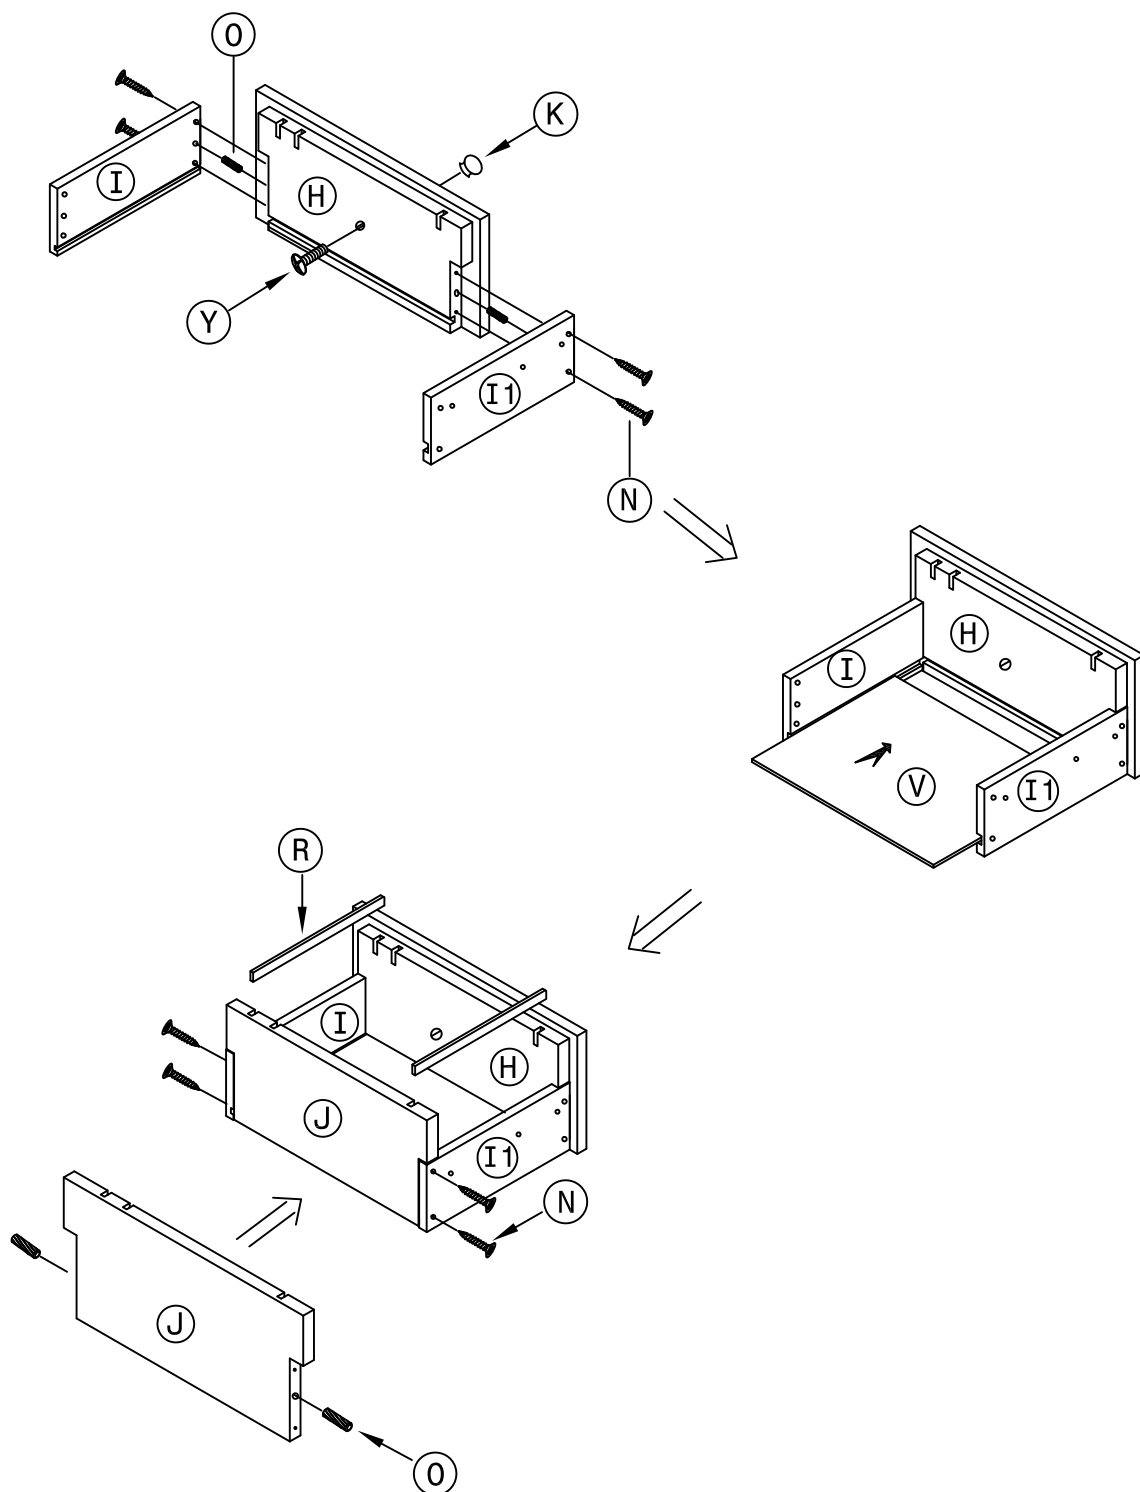


1) . ASSEMBLE THE DRAWER.

- INSERT 2 DOWELS(O) INTO THE HOLES IN THE PANEL(H) AND ATTACH SIDE PANEL(I/I1) USING 4 SCREWS(N) .
- ATTACH A KNOB(K) TO FRONT DRAWER PANEL(H) USING A SCREW(Y) .
- INSERT BOTTOM DRAWER PANEL(V) INTO THE SLOT IN THE SIDE DRAWER PANELS(I/I1) .
- INSERT 2 DOWELS(O) INTO THE HOLES IN THE BACK DRAWER PANEL(J) AND ATTACH USING 4 SCREWS(N) .
- INSERT THE FILE HANGER(R) INTO THE CUT-OUT OF THE FRONT & BACK DRAWER PANELS(H/J) .

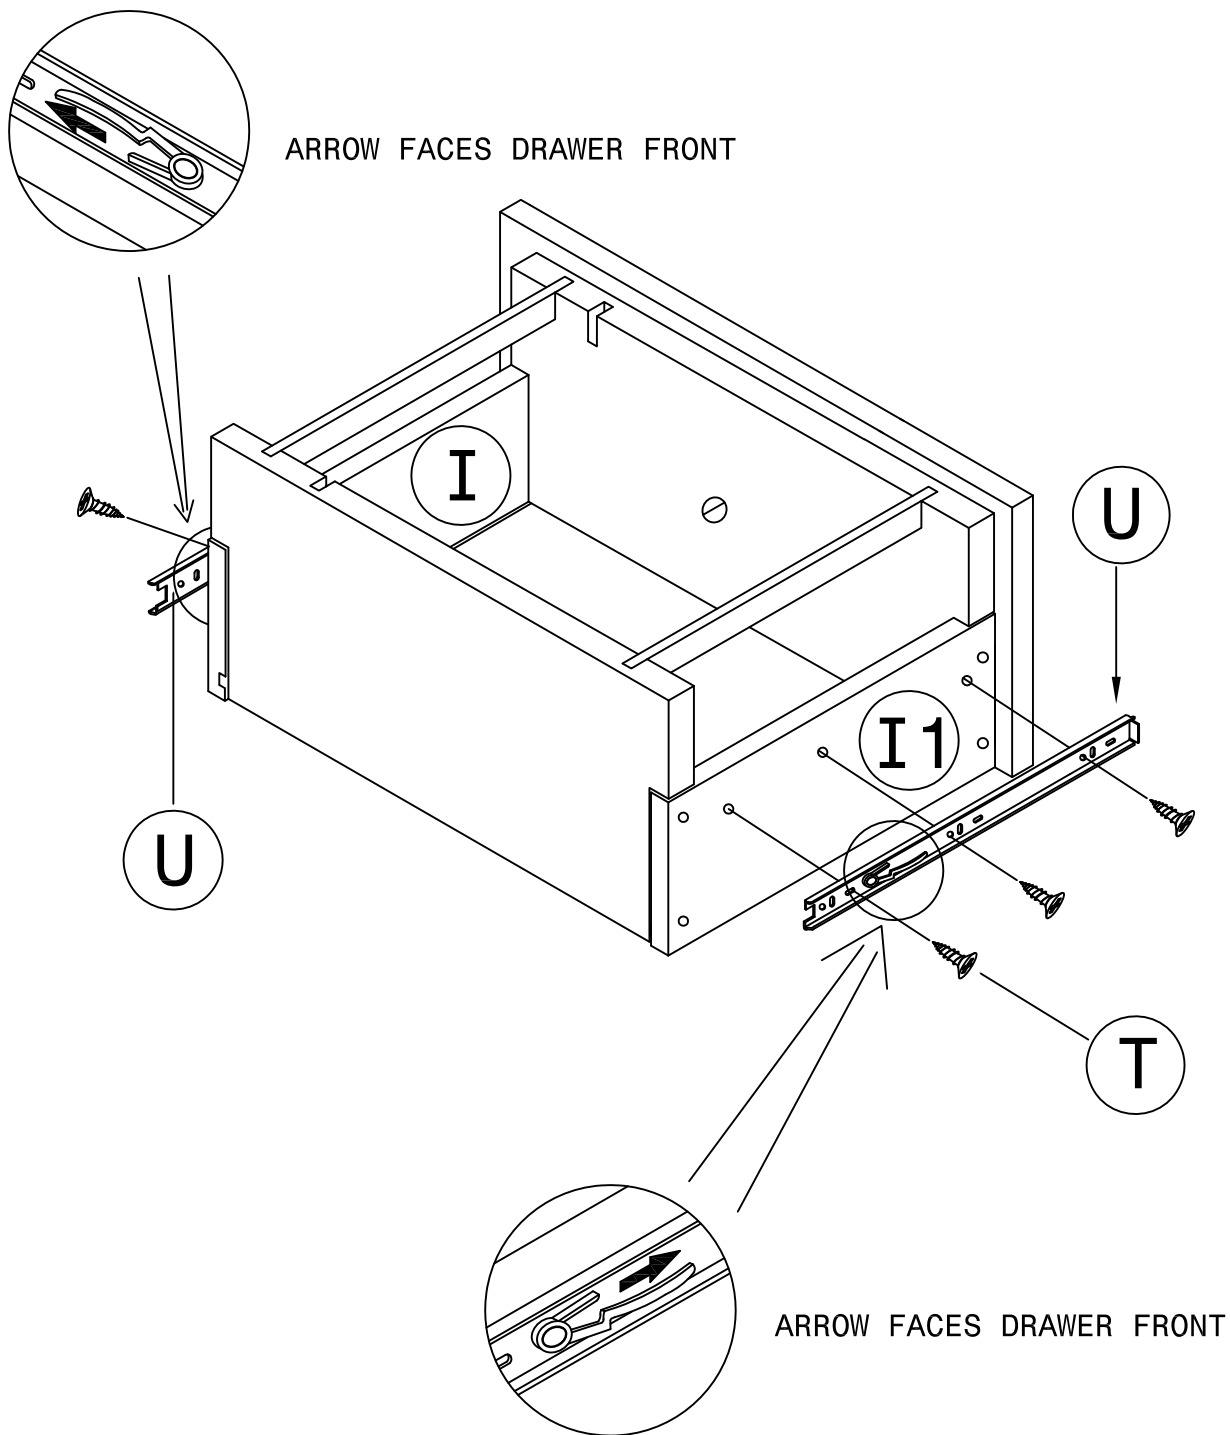


2). ASSEMBLE THE INNER SLIDES(U).

- ATTACH INNER SLIDES(U) TO DRAWER PANEL SIDE(I/I1) USING 6 SCREWS(T).

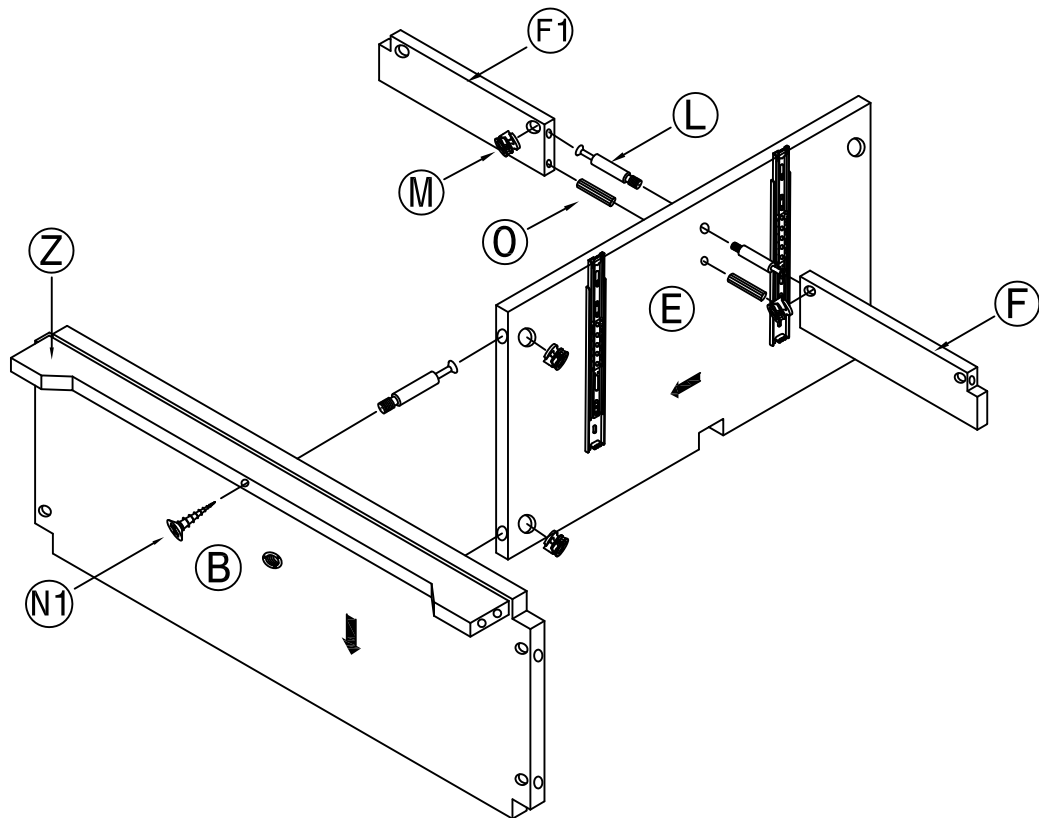


3) . ASSEMBLE BOTTOM PANEL(B) .

- INSERT 2 DOWELS(O) INTO THE HOLES IN THE ACROSS PANEL(F/F1)
- ROTATE 2 CAM-BOLTS(L) INTO THE HOLES IN THE STAND PANEL(E) AND 2 CAM-BOLTS(L) INTO BOTTOM PANEL(B) .
- PLACE CAM-BOLTS(L) INTO THE HOLES IN THE PANEL(F/F1/E) AND ATTACH USING 4 CAM-LOCKS(M) .
- ATTACH THE LOW PANEL(Z) TO BOTTOM PANEL(B) USING A SCREW(N1) .

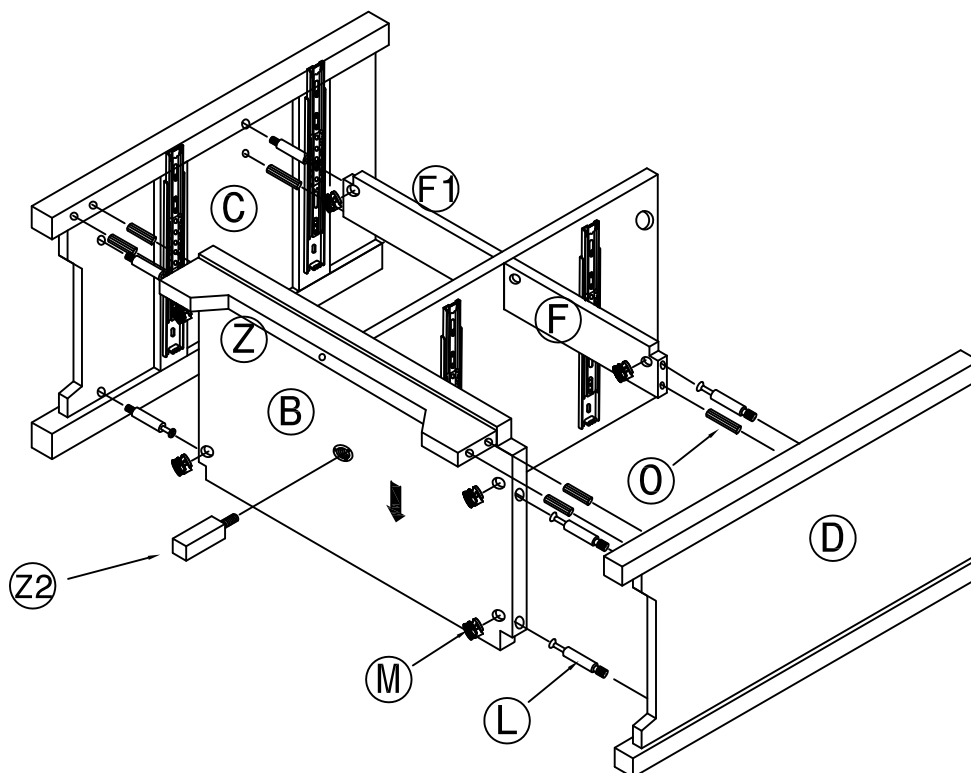


4) ASSEMBLE SIDE PANEL(C/D) .

- INSERT 6 DOWELS(O) INTO THE HOLES IN THE PANEL(F/F1/Z) .
- ROTATE 6 CAM-BOLTS(L) INTO THE HOLES IN THE SIDE PANEL(C/D) .
- PLACE CAM-BOLTS(L) INTO THE HOLES IN THE PANEL(B/F/F1) AND ATTACH USING 6 CAM-LOCKS(M) .
- ROTATE THE FOOT(Z2) INTO THE HOLES IN THE BOTTOM PANEL(B) .

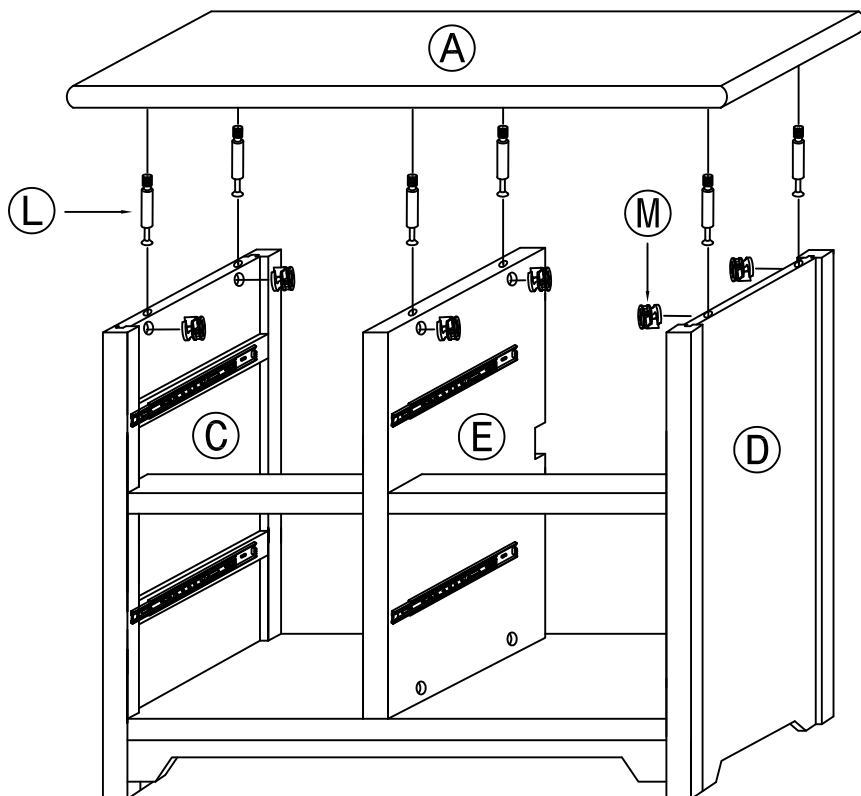


5) .ASSEMBLE TOP PANEL (A) .

- ROTATE 6 CAM-BOLTS(L) INTO THE HOLES IN THE TOP PANEL PANEL(A) .
- PLACE CAM-BOLTS(L) INTO THE HOLES IN THE PANEL(C/D/E) AND ATTACH USING 6 CAM-LOCKS(M) .

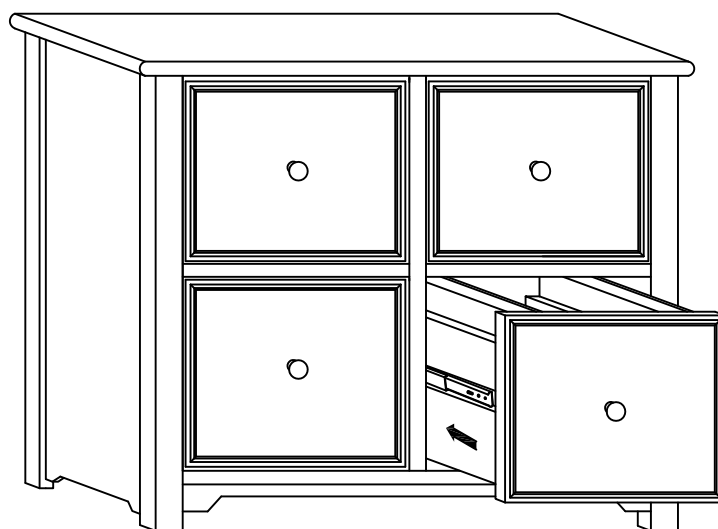

6) . ASSEMBLE THE DRAWER.


- SLIDE THE DRAWER INNER SLIDES INTO OUTER SLIDES.

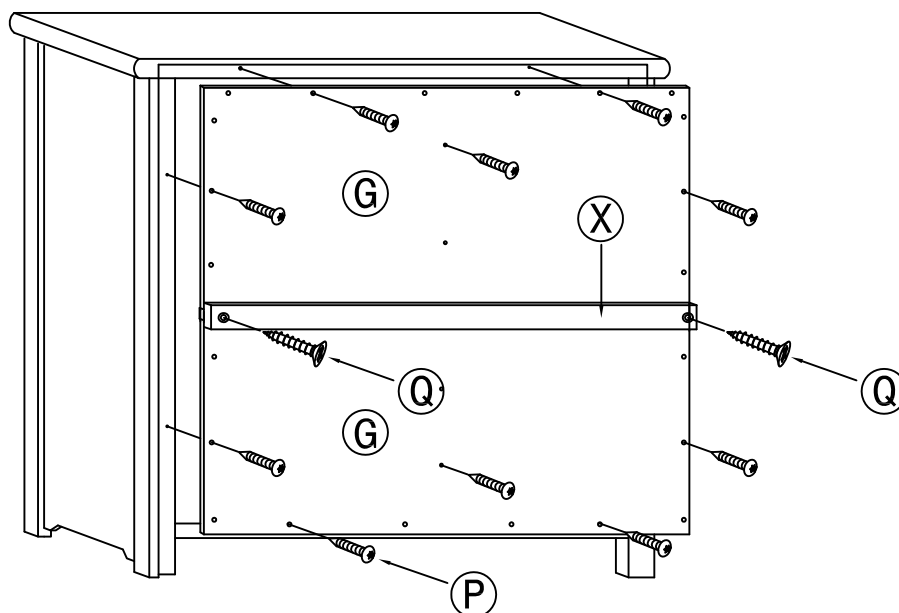

7) . ASSEMBLE THE BACK PANEL (G) .

- INSERT THE BACK PANEL (G) INTO THE SLOTS IN THE REAR PANEL GUIDE (X) .
- ATTACH BACK PANEL (G) AND REAR PANEL GUIDE (X) USING SCREWS (P/Q) .

- I** ● ATTACH 2 HOOK(W1) USING 2 SCREWS(X1) IN THE
PREDRILLED HOLES OF REAR TOP PANEL.

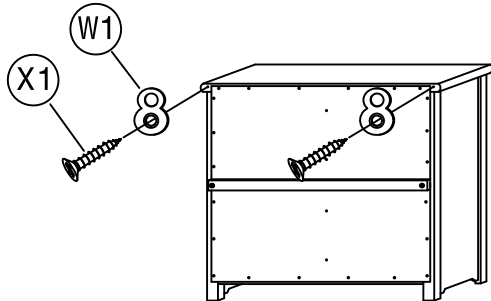

- II** ● DRILLING TWO HOLES INTO WALL, PLEASE REFER TO TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- TAP 2 GECKOS(Y1) INTO THE HOLES ON THE WALL. THEN ROTATE 2 SCREWS(Z1) INTO THE GECKOS(Y1).

